

*TBL 5-3-5*  
**Level Downlink Message Elements (LVLD)**

CPDLC Message Sets			Operational Definition in PANS-ATM (Doc 4444)		
FANS 1/A	ATN B1	Response	Message Element Identifier	Message Element Intended Use	Format for Message Element Display
DM6 REQUEST ( <i>altitude</i> ) <i>Note – Used for a single level</i>	DM6 REQUEST ( <i>level</i> )	Y	LVLD-1	Request to fly at the specified level or vertical range.	REQUEST ( <i>level</i> )
DM9 REQUEST CLIMB TO ( <i>altitude</i> )	DM9 REQUEST CLIMB TO ( <i>level</i> )	Y	LVLD-2	Request for a climb to the specified level or vertical range.	REQUEST CLIMB TO ( <i>level</i> )
DM10 REQUEST DESCENT TO ( <i>altitude</i> )	DM10 REQUEST DESCENT TO ( <i>level</i> )	Y	LVLD-3	Request for a descent to the specified level or vertical range.	REQUEST DESCENT TO ( <i>level</i> )
DM38 ASSIGNED LEVEL ( <i>altitude</i> ) <i>Note – Used for a single level</i>	DM38 ASSIGNED LEVEL ( <i>level</i> )	N	LVLD-11	Confirmation that the assigned level or vertical range is the specified level or vertical range.	ASSIGNED LEVEL ( <i>level</i> )
DM61 DESCENDING TO ( <i>altitude</i> ) <i>Note – urgent alert attribute</i>	N/A	N	LVLD-14	Report indicating descending to the specified level.	DESCENDING TO ( <i>level single</i> )